

# Product Bulletin

**Doc. No. 33942A01**

## Lubricate the O-ring on the Inspire breathing valve

Announcement

STOCKHOLM 2016

Lubricate the O-ring on the breathing valve if it is dry or the breathing valve is difficult to mount in the Inspire mask.


### Applies to

Inspire mask

### Description

1. Remove the O-ring according to the image below.

**IMPORTANT:** Do not use any sharp tool or nails to remove the O-ring as this may damage the sealing capability.

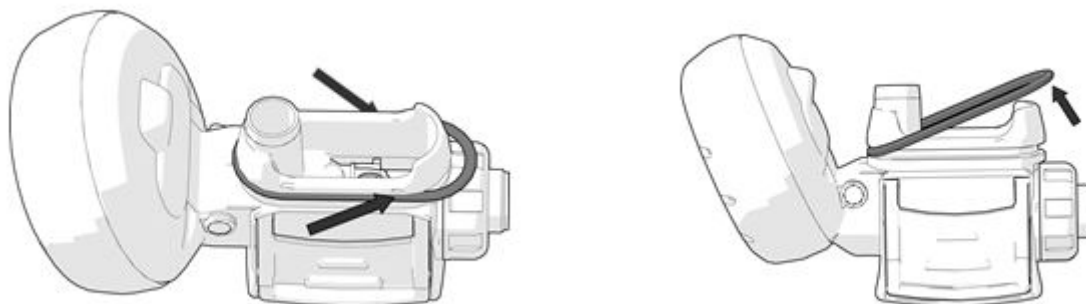

2. Lubricate the O-ring amply with silicone lubricant (331900269).
3. Fit the O-ring without stretching it out more than necessary as this can cause cracks.