

Manual cleaning of breathing apparatus and cylinders with PPE Decon Cleaner

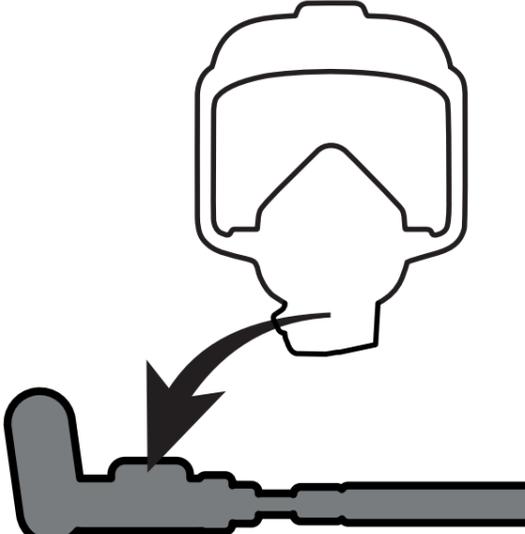
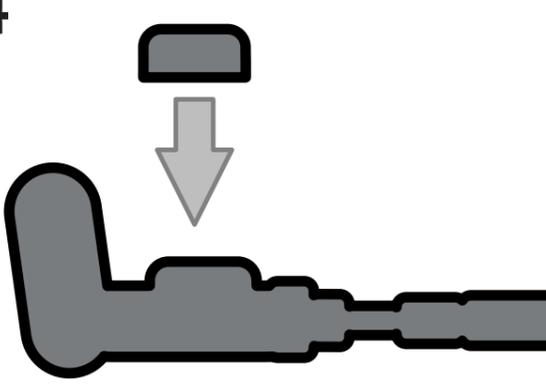
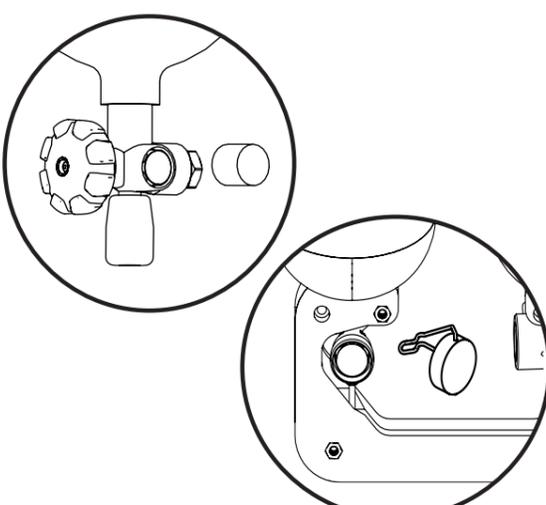
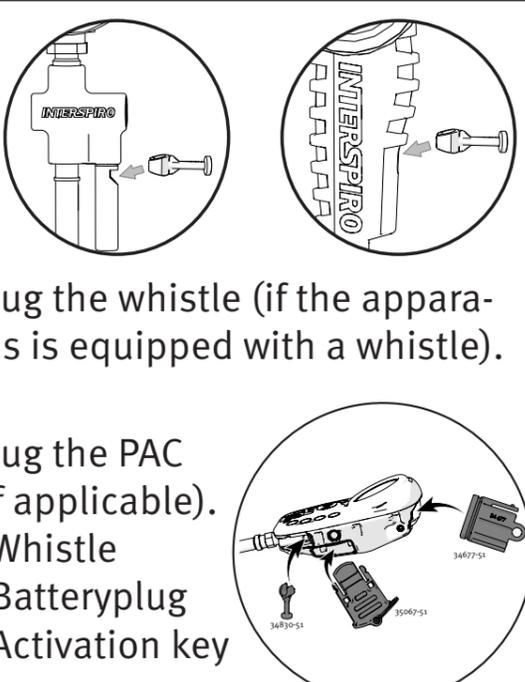
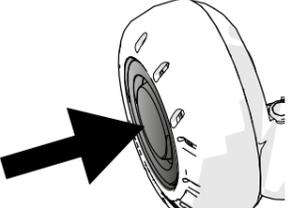
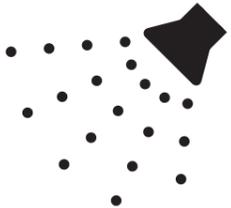


INTERSPIRO

Keeps You Breathing



Read the safety data sheet

<p>1</p>  <ul style="list-style-type: none"> • Dosage: 0,5 - 3dl per 10 liters of water (0,5 - 3%). • Use higher dosage for heavily soiled equipment. • Water temperature: 30 - 40 degrees. 	<p>2</p>  <ul style="list-style-type: none"> • Remove the breathing valve from the mask. 	<p>3</p>  <ul style="list-style-type: none"> • Remove the mask and clean according to instructions 33959, 35295 or 34214. • Remove accessories (eg electronics) that must not be cleaned.
<p>4</p>  <ul style="list-style-type: none"> • Plug the breathing valve with the correct type of plug. 	<p>5</p>  <ul style="list-style-type: none"> • Plug the pressure gauge (if the cylinder / cylinder pack is equipped with a pressure gauge). 	<p>6</p>  <ul style="list-style-type: none"> • Plug the whistle (if the apparatus is equipped with a whistle). • Plug the PAC (if applicable). <ul style="list-style-type: none"> - Whistle - Batteryplug - Activation key
<p>7</p>  <p>Pressurize the apparatus: To prevent water to enter.</p> <p>For breathing valve with lever (Inspire-FB, Respire, S-FB & Spiromatic): Push the lever towards the diaphragm cover to activate positive pressure.</p> <ul style="list-style-type: none"> • Open the cylinder valve • Close the cylinder valve 	<p>8</p>  <p>Pressurize the breathing valve: This step are only applicable for Inspire-H & Inspire-A:</p> <ul style="list-style-type: none"> • Press the purge button until a puff of air is heard. Hold onto the washer plug or press it back into place afterwards. 	<p>9</p>  <ul style="list-style-type: none"> • Spray on the solution. • Leave on for 3-5 minutes. <p>NOTE: Do not allow the cleaning agent to dry on surfaces being cleaned. Tip: Foam assembling equipment increases the effect and improves the working</p>

Manuell rengöring av andningsapparater och flaskor med PPE Decon Cleaner

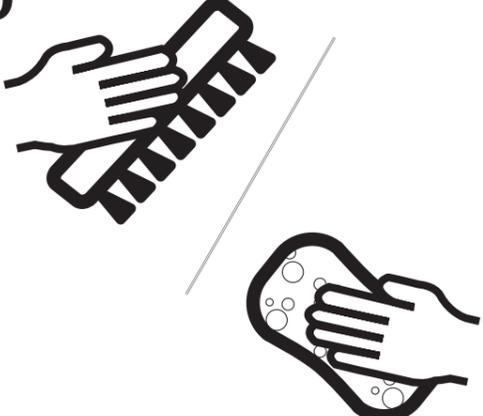
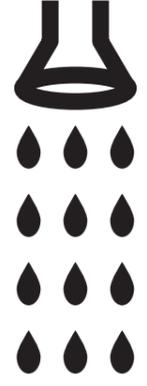
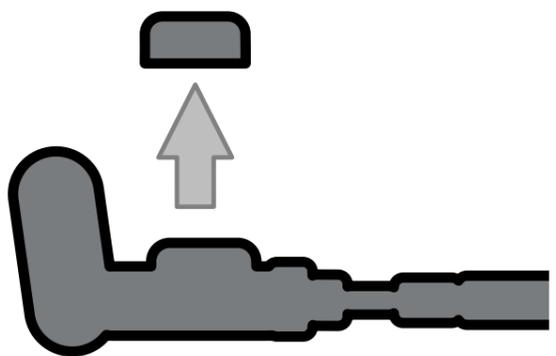
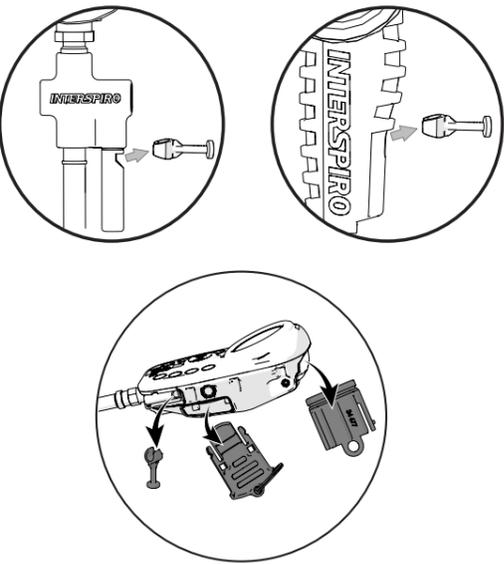
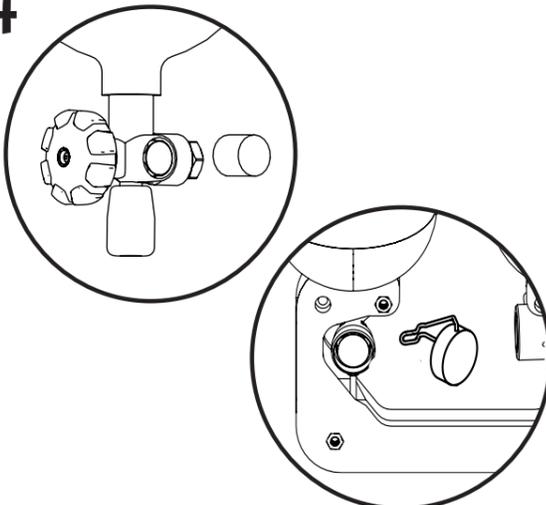
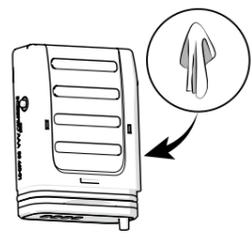
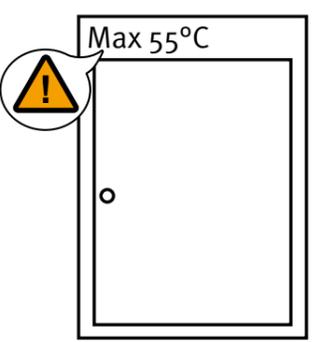
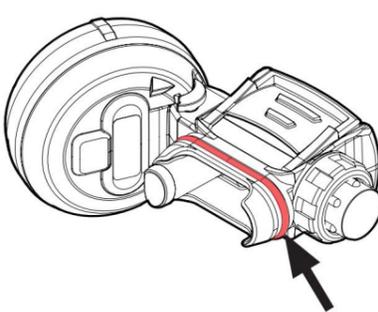


INTERSPIRO

Keeps You Breathing



Read the safety data sheet

<p>10</p>  <ul style="list-style-type: none"> • Rub the surfaces with a soft brush or sponge. 	<p>11</p>  <ul style="list-style-type: none"> • Rinse thoroughly with clean water. • Use caution if high pressure washing is used. • Repeat steps 9-11 if necessary. 	<p>12</p>  <ul style="list-style-type: none"> • Remove the washing plug from the breathing val. 																																		
<p>13</p>  <ul style="list-style-type: none"> • Remove any washing plug from the whistle and PAC. 	<p>14</p>  <ul style="list-style-type: none"> • Remove any washing plug from the pressure gauge. 	<p>15</p> <p>Breathing apparatus</p> <ul style="list-style-type: none"> • Depressurize apparatus and remove cylinder. <p>Only cylinder</p> <ul style="list-style-type: none"> • Open the cylinder valve 1 second. NOTE! Use hearing protection. <p>PAC battery pack</p> <ul style="list-style-type: none"> • Wipe clean with a cloth. 																																		
<p>16</p>  <p>Dry thoroughly:</p> <ul style="list-style-type: none"> • It is recommended to use drying cabinet, max 55 °C. <p><i>For cylinder quick coupling version with usage including repeated cylinder replacement, at least 4 hours drying in drying cabinet is required.</i></p>	<p>17</p>  <p>Inspire breathing valve: Lubricate the o-ring on the connection (if needed) to ensure that the valve can be easily pushed into the quick coupling to the mask.</p>	<table border="0"> <tr> <td>Detergents & accessories</td> <td>Article no</td> </tr> <tr> <td>PPE Decon Cleaner 10L concentrate</td> <td>34893-10</td> </tr> <tr> <td>PPE Decon Cleaner 25L concentrate</td> <td>34893-25</td> </tr> <tr> <td>Dosing pump manual</td> <td>33440-01</td> </tr> <tr> <td>Hand pump 1,5 liter</td> <td>32453-01</td> </tr> <tr> <td>Washing plugs & protection</td> <td>Article no</td> </tr> <tr> <td>Plug Spiromatic breathing valve</td> <td>31732-51</td> </tr> <tr> <td>Plug S breathing valve</td> <td>31731-51</td> </tr> <tr> <td>Plug ESA breathing valve</td> <td>32444-51</td> </tr> <tr> <td>Plug Inspire breathing valve</td> <td>33438-52</td> </tr> <tr> <td>Plug whistle</td> <td>34830-51</td> </tr> <tr> <td>Plug pressure gauge singel cylinder</td> <td>33475-51</td> </tr> <tr> <td>Plug pressure gauge cylinder pack</td> <td>32350-51</td> </tr> <tr> <td>Plug cylinder valve, air, G5/8</td> <td>460190220</td> </tr> <tr> <td>Protection plug cylinder quick coupling</td> <td>32372-51</td> </tr> <tr> <td>Plug PAC battery</td> <td>34677-51</td> </tr> <tr> <td>Plug PAC whistle</td> <td>34830-51</td> </tr> </table> <p>Customer contact: + 46 8 636 51 00 servicesweden@interspiro.com www.interspiro.se</p>	Detergents & accessories	Article no	PPE Decon Cleaner 10L concentrate	34893-10	PPE Decon Cleaner 25L concentrate	34893-25	Dosing pump manual	33440-01	Hand pump 1,5 liter	32453-01	Washing plugs & protection	Article no	Plug Spiromatic breathing valve	31732-51	Plug S breathing valve	31731-51	Plug ESA breathing valve	32444-51	Plug Inspire breathing valve	33438-52	Plug whistle	34830-51	Plug pressure gauge singel cylinder	33475-51	Plug pressure gauge cylinder pack	32350-51	Plug cylinder valve, air, G5/8	460190220	Protection plug cylinder quick coupling	32372-51	Plug PAC battery	34677-51	Plug PAC whistle	34830-51
Detergents & accessories	Article no																																			
PPE Decon Cleaner 10L concentrate	34893-10																																			
PPE Decon Cleaner 25L concentrate	34893-25																																			
Dosing pump manual	33440-01																																			
Hand pump 1,5 liter	32453-01																																			
Washing plugs & protection	Article no																																			
Plug Spiromatic breathing valve	31732-51																																			
Plug S breathing valve	31731-51																																			
Plug ESA breathing valve	32444-51																																			
Plug Inspire breathing valve	33438-52																																			
Plug whistle	34830-51																																			
Plug pressure gauge singel cylinder	33475-51																																			
Plug pressure gauge cylinder pack	32350-51																																			
Plug cylinder valve, air, G5/8	460190220																																			
Protection plug cylinder quick coupling	32372-51																																			
Plug PAC battery	34677-51																																			
Plug PAC whistle	34830-51																																			