


Machine cleaning

Full face masks & Firefighting helmet F300



INTERSPIRO

Keeps You Breathing

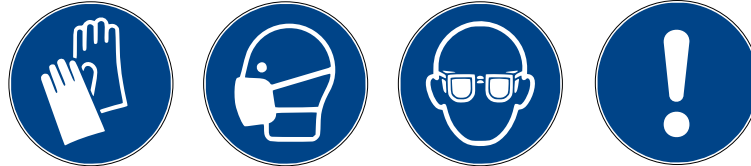

Read safety data sheet and product label of the cleaning agents

<p>1</p> <ul style="list-style-type: none"> Remove the breathing valve. Remove accessories that must not be machine cleaned (eg electronics). 	<p>2</p> <ul style="list-style-type: none"> Close the hatch (if applicable). 	<p>3</p> <ul style="list-style-type: none"> Put masks/helmets in the washing bag. Close it carefully and lock it with the four cord locks. Preferably wash the maximum number of masks/helmets specified by the washing machine manufacturer (normally 6-14 masks/helmet). 								
<p>4</p> <p>Check:</p> <ul style="list-style-type: none"> Sufficient PPE Decon Detergent. Sufficient PPE Decon Disinfectant. Water supply open. Special wash program for Interspiro products (max 50° C) selected. 	<p>5</p> <p>Disinfection step</p> <ul style="list-style-type: none"> Dose 0.5% PPE Decon Disinfectant in a separate step after the cleaning step but before rinsing. Temperature: 40 °C Time: 15 minutes 	<p>6</p> <ul style="list-style-type: none"> Remove the mask/helmet from the washing bag and shake off excess water. Check that the mask is clean. If necessary, re-wash the mask or finish washing it manually. 								
<p>7</p> <ul style="list-style-type: none"> Open the hatch (if applicable). Let the mask dry. In a drying cabinet, maximum 2 hours at 55 °C applies. (proper drying counteracts the growth of bacteria and mold). 	<p>8</p> <ul style="list-style-type: none"> The washing bags can be spun to accelerate drying. When drying in a drying cabinet, a maximum of 55 °C applies. 	<table border="1"> <thead> <tr> <th>Detergents & accessories</th> <th>Part number</th> </tr> </thead> <tbody> <tr> <td>PPE Decon Detergent, 25L</td> <td>34894-25</td> </tr> <tr> <td>PPE Decon Disinfectant, 10 L</td> <td>40020-10</td> </tr> <tr> <td>Mask washing bags, 6-pack</td> <td>35009-01</td> </tr> </tbody> </table> <p>For dosing equipment to automatic washing machines — contact Interspiro.</p> <p>Customer contact: Interspiro AB Box 2853, 187 28 Täby + 46 8 636 51 00 servicesweden@interspiro.com interspiro.com</p>	Detergents & accessories	Part number	PPE Decon Detergent, 25L	34894-25	PPE Decon Disinfectant, 10 L	40020-10	Mask washing bags, 6-pack	35009-01
Detergents & accessories	Part number									
PPE Decon Detergent, 25L	34894-25									
PPE Decon Disinfectant, 10 L	40020-10									
Mask washing bags, 6-pack	35009-01									