

Machine cleaning of breathing apparatus and cylinders with PPE Decon Cleaner



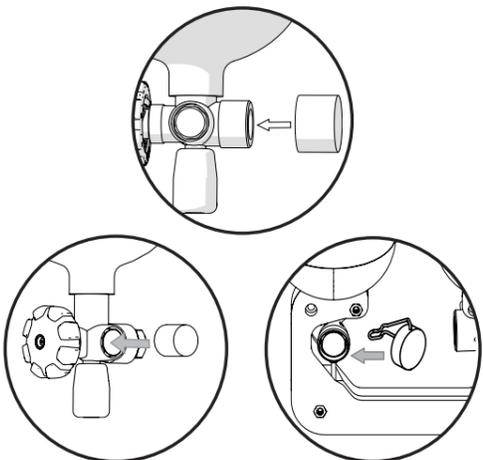
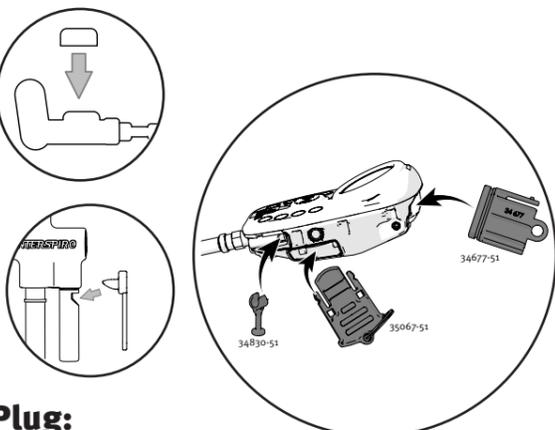
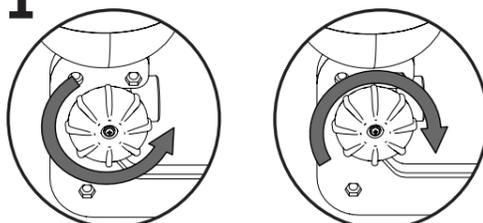
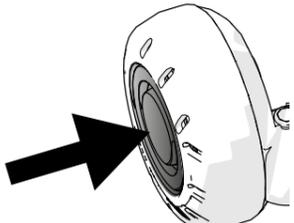
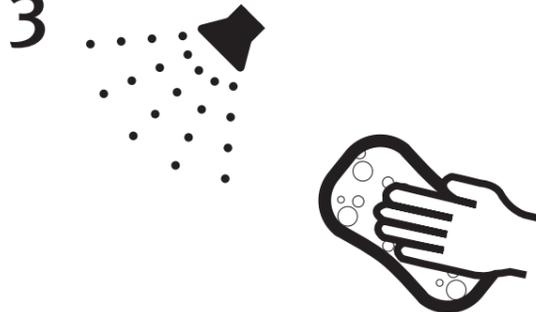
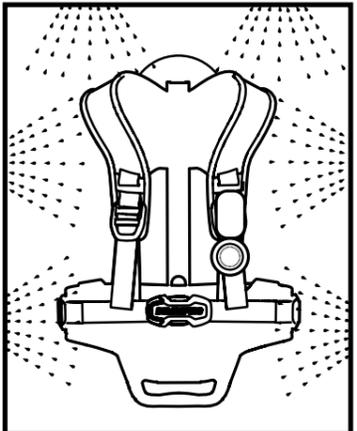
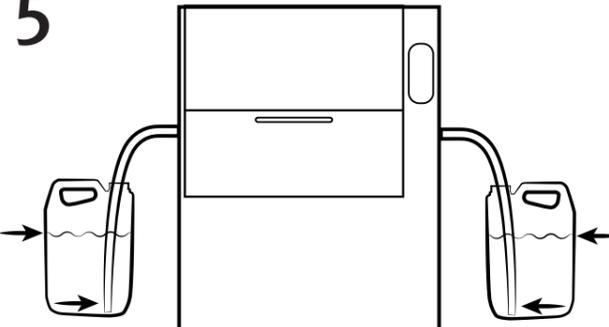
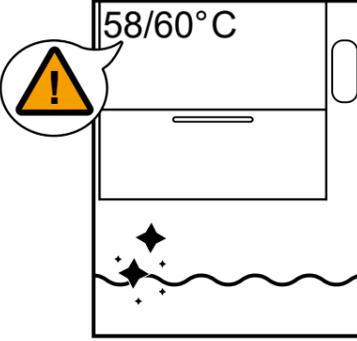
INTERSPIRO

Keeps You Breathing



Read the safety data sheet and the product label

BEFORE WASHING

<h3>CYLINDER</h3>  <p>Plug:</p> <ul style="list-style-type: none"> • Cylinder - if washed separately. • Cylinder pressure gauge. 	<h3>BREATHING VALVE</h3>  <p>Plug:</p> <ul style="list-style-type: none"> • Breathing valve • Warning unit whistle • PAC <ol style="list-style-type: none"> 1. Whistle - plug 2. Battery - plug 3. Activation key inserted as a plug 	 <p>Remove the mask and wash it according to instruction 33959, 35295 or 34214.</p>  <p>Applies to avoid that the pressure in the cylinder exceeds the working pressure due to the heat exposure.</p>  <p>Applies to devices with a warning whistle so that the whistle is not activated and empties the cylinder during washing.</p>
<p>1</p>   <p>Pressurize the apparatus: To minimize flush shadows use wash cylinder (40100-01).</p> <p>For breathing valve with handle (Inspire-FB, Respire, S-FB & Spiromatic): Make sure the handle is in the position for activated air to the mask.</p> <ul style="list-style-type: none"> • Open the cylinder valve • Close the cylinder valve 	<p>2</p>  <p>Pressurize the breathing valve: This step is only applicable for Inspire-H & Inspire-A:</p> <ul style="list-style-type: none"> • Press the purge button until a puff of air is heard. Hold onto the washer plug or press it back into place afterwards. 	<p>3</p>  <p>Pre-treat (for best result):</p> <ul style="list-style-type: none"> • Spray with PPE Decon Cleaner. • Remove the dirt with a sponge. <p>Dosing: 0,5 - 3 dl per 10 liters of water (0,5 - 3 %). Use higher dosage for heavily soiled equipment.</p>
<p>4</p>  <p>Place the equipment correct:</p> <ul style="list-style-type: none"> • Minimize "flush shadows". • Make sure that straps can not get caught in the moving parts of the machine. 	<p>5</p>  <p>Check:</p> <ul style="list-style-type: none"> • that it is enough PPE Decon Cleaner in the can. • that it is enough PPE Decon Defoamer in the can. • that there are no air in the hose. • that the hose reaches down in the can properly. 	<p>6</p>  <p>58/60°C</p> <ul style="list-style-type: none"> • Clean machine. • Clean water. (change water according to instructions on the next page) • Washing and rinsing temperature 58° or 60°. • Time: 20-30 min (30 min is more effective).

Machine cleaning of breathing apparatus and cylinders with PPE Decon Cleaner



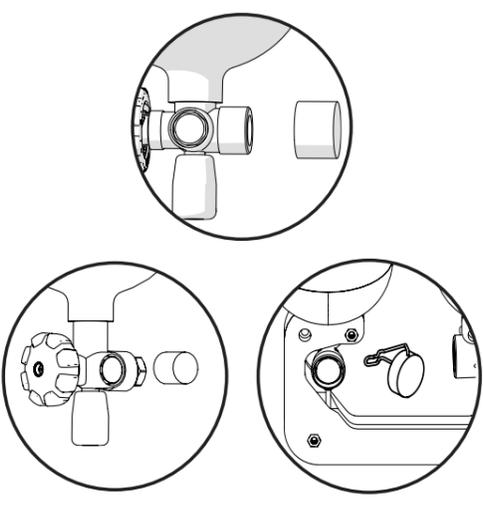
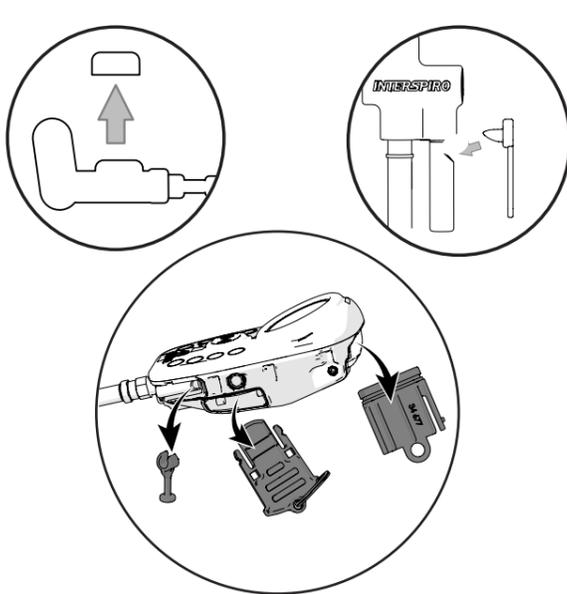
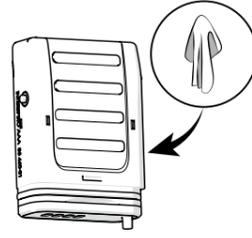
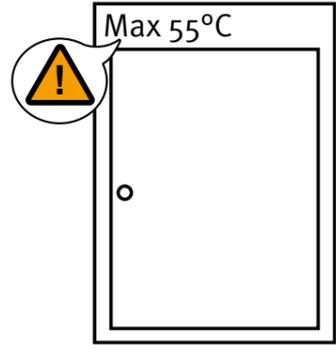
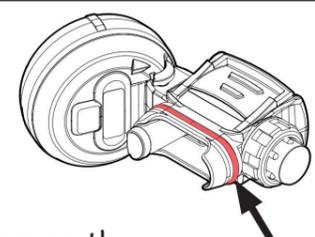
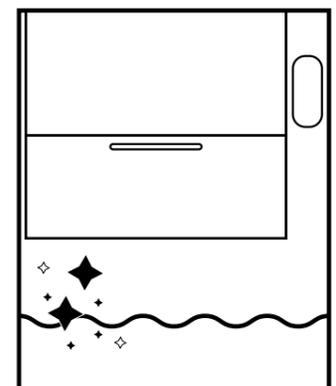
INTERSPIRO

Keeps You Breathing



Read the safety data sheet and the product label

AFTER WASHING

 <p>After treatment:</p> <ul style="list-style-type: none"> Remove any remaining dirt with PPE Decon Cleaner and a sponge. Rinse carefully with clean water. 	<h3>CYLINDER</h3>  <ul style="list-style-type: none"> Remove the washing plugs. 	<h3>BREATHING VALVE</h3>  <ul style="list-style-type: none"> Remove the washing plugs. 																																						
<p>1</p> <p>Breathing apparatus</p> <ul style="list-style-type: none"> Depressurize apparatus and remove cylinder. <p>Only cylinder</p> <ul style="list-style-type: none"> Open the cylinder valve 1 second. <p>NOTE! Use hearing protection.</p> <p>PAC battery pack</p> <ul style="list-style-type: none"> Wipe clean with a cloth. 	<p>2</p>  <p>Dry thoroughly:</p> <ul style="list-style-type: none"> It is recommended to use drying cabinet, max 55 °C. <p><i>For cylinder quick coupling version with usage including repeated cylinder replacement, at least 4 hours drying in drying cabinet is required.</i></p>	<p>3</p>  <p>Inspire breathing valve:</p> <p>Lubricate the o-ring on the connection (if needed) to ensure that the valve can be easily pushed into the quick connection to the mask.</p> <p>Machine:</p> <ul style="list-style-type: none"> Leave the door open. Drain the water if: <ol style="list-style-type: none"> it has been used for more than 20 washes. if it will remain longer than 4 days in hot machine. immediately after washing in unheated machine. 																																						
<p>4</p>  <p>Clean the machine regularly:</p> <ul style="list-style-type: none"> Spray the inside of the machine with PPE Decon Cleaner (use solution). Leave on for 1-3 minutes. Brush with a soft brush. Then rinse it clean with water. Follow the machine manufacturer's recommendations. 	<table border="1"> <thead> <tr> <th>Washing plugs & protection</th> <th>Article no</th> </tr> </thead> <tbody> <tr> <td>Plug Spiromatic breathing valve</td> <td>31732-51</td> </tr> <tr> <td>Plug S breathing valve</td> <td>31731-51</td> </tr> <tr> <td>Plug ESA breathing valve</td> <td>32444-51</td> </tr> <tr> <td>Plug Inspire breathing valve</td> <td>33438-52</td> </tr> <tr> <td>Plug whistle</td> <td>34830-51</td> </tr> <tr> <td>Plug pressure gauge single cylinder</td> <td>33475-51</td> </tr> <tr> <td>Plug pressure gauge cylinder pack</td> <td>32350-51</td> </tr> <tr> <td>Plug cylinder valve, air, G5/8</td> <td>460190220</td> </tr> <tr> <td>Protective plug for cylinder, valve adapter</td> <td>32372-51</td> </tr> <tr> <td>Plug PAC battery</td> <td>34677-51</td> </tr> <tr> <td>Plug PAC whistle</td> <td>34830-51</td> </tr> </tbody> </table> <p>For dosing equipment to automatic washing machines — contact Interspiro.</p>	Washing plugs & protection	Article no	Plug Spiromatic breathing valve	31732-51	Plug S breathing valve	31731-51	Plug ESA breathing valve	32444-51	Plug Inspire breathing valve	33438-52	Plug whistle	34830-51	Plug pressure gauge single cylinder	33475-51	Plug pressure gauge cylinder pack	32350-51	Plug cylinder valve, air, G5/8	460190220	Protective plug for cylinder, valve adapter	32372-51	Plug PAC battery	34677-51	Plug PAC whistle	34830-51	<table border="1"> <thead> <tr> <th>Detergents & accessories</th> <th>Article no</th> </tr> </thead> <tbody> <tr> <td>PPE Decon Cleaner 10L concentrate</td> <td>34893-10</td> </tr> <tr> <td>PPE Decon Cleaner 25L concentrate</td> <td>34893-25</td> </tr> <tr> <td>PPE Decon Defoamer 5L</td> <td>32474-05</td> </tr> <tr> <td>Dosing pump manual</td> <td>33440-01</td> </tr> <tr> <td>Hand pump 1.5 liter</td> <td>32453-01</td> </tr> <tr> <td>Washing cylinder</td> <td>40100-01</td> </tr> </tbody> </table> <p>Customer contact: INTERSPIRO AB Box 2853, 187 28 Täby + 46 8 636 51 00 servicesweden@interspiro.com www.interspiro.com</p>	Detergents & accessories	Article no	PPE Decon Cleaner 10L concentrate	34893-10	PPE Decon Cleaner 25L concentrate	34893-25	PPE Decon Defoamer 5L	32474-05	Dosing pump manual	33440-01	Hand pump 1.5 liter	32453-01	Washing cylinder	40100-01
Washing plugs & protection	Article no																																							
Plug Spiromatic breathing valve	31732-51																																							
Plug S breathing valve	31731-51																																							
Plug ESA breathing valve	32444-51																																							
Plug Inspire breathing valve	33438-52																																							
Plug whistle	34830-51																																							
Plug pressure gauge single cylinder	33475-51																																							
Plug pressure gauge cylinder pack	32350-51																																							
Plug cylinder valve, air, G5/8	460190220																																							
Protective plug for cylinder, valve adapter	32372-51																																							
Plug PAC battery	34677-51																																							
Plug PAC whistle	34830-51																																							
Detergents & accessories	Article no																																							
PPE Decon Cleaner 10L concentrate	34893-10																																							
PPE Decon Cleaner 25L concentrate	34893-25																																							
PPE Decon Defoamer 5L	32474-05																																							
Dosing pump manual	33440-01																																							
Hand pump 1.5 liter	32453-01																																							
Washing cylinder	40100-01																																							