

Product Bulletin

30013A01

Easier Recognition of MKII Valve Inserts and Guide Discs (without Safety Pressure)

LIDINGÖ May 25, 2008

ANNOUNCEMENT

To ensure easier recognition of breathing valves **without safety pressure**, the black O-ring at the end of the connection nipple has been replaced with a green O-ring.

Similarly, the Guide disc 460 190 412 (for the Sealing spring, 460 190 500), has been fitted with a hole to recognize more easily that the spring assembly is made for a breathing valve **without safety pressure** (see illustration below).


APPLIES TO

This applies only to MKII breathing valves without safety pressure.

At the next release the Divator Spare Part List will be updated with the new green O-ring.

DESCRIPTION

The new green O-ring is visible at the breathing hose connector.

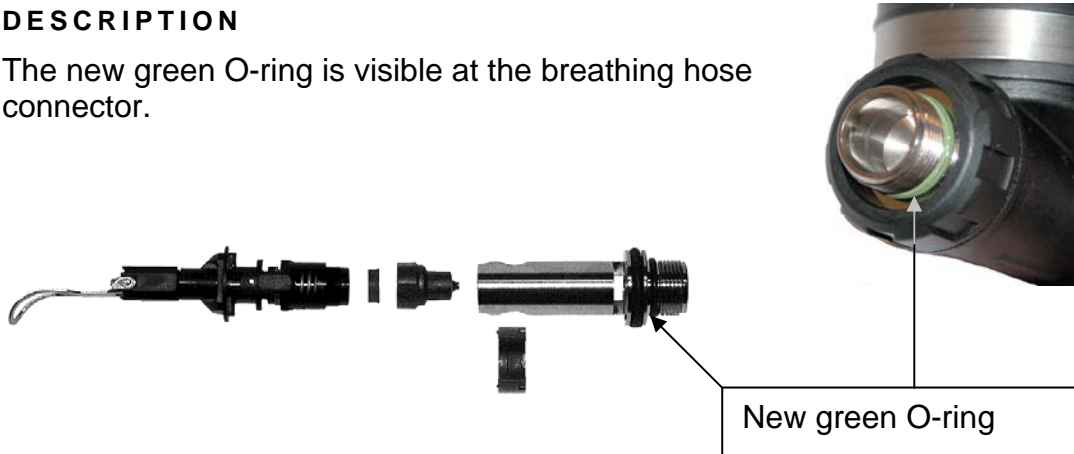

ORDER INFORMATION

Spare green O-rings can be ordered under part number:

99 486-51 O-ring, green, 10 pack

INTERSPIRO GROUP
Lidingö, Sweden

