

Product Bulletin

30063A01

Octopus Breathing Valve with Lever

LIDINGÖ May 15, 2008

ANNOUNCEMENT

97199-02 Octopus Breathing Valve with Locking Lever

APPLIES TO

336190347 Breathing Valve Grey with Mouth Piece

97199-01 Breathing Valve Black with Mouth Piece

97199-03 Breathing Valve Black with Yellow Shield Ring

DESCRIPTION

Interspiro introduces the 97199-02 Octopus Breathing Valve, specifically developed for use as a secondary or octopus breathing valve.

The new Octopus Breathing Valve has the following improvements compared to:

336190347 Breathing Valve Grey with Mouth Piece

97199-01 Breathing Valve Black with Mouth Piece

97199-03 Breathing Valve Black with Yellow Shield Ring

Improvements:

Yellow Shield Ring: making the Octopus Breathing Valve easier to find in case of emergency.

Yellow Octopus quick snap Octopus Holder: making the Octopus Breathing Valve easier to attach or detach.


Locking Lever: locks the valve from inadvertent free flow of air. The Locking Lever is "first breath activated," meaning there is no need to manually activate/release the lever in case of use.

ORDERING INFORMATION

97199-02 Octopus Breathing Valve with Locking Lever

INTERSPIRO GROUP

Lidingö, Sweden

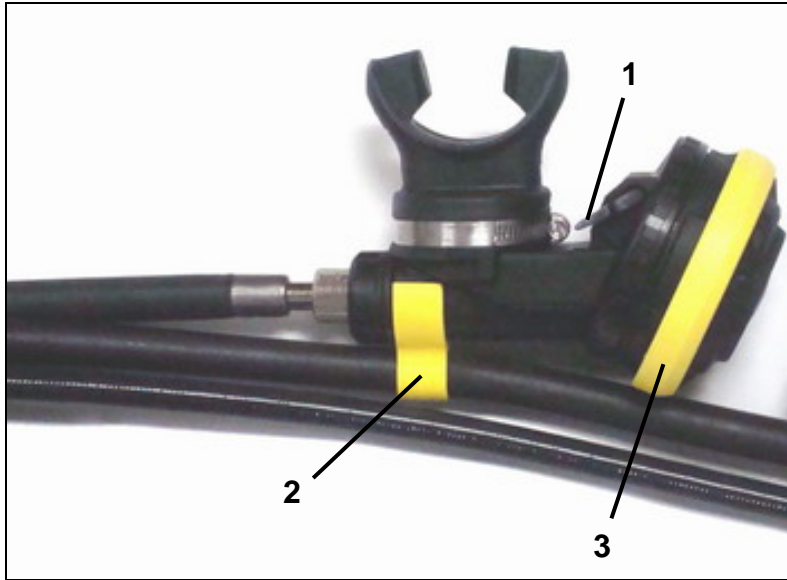

*Overview of the Octopus Breathing Valve
(1 - Locking Lever, 2 - Quick Snap Octopus Holder, 3 - Shield Ring)*