

QS HARNESS

- ❶ Double pivot mechanism
→ **Excellent weight distribution**
- ❷ Increased padding and wide shoulder straps
→ **Ultimate comfort**
- ❸ Low weight
→ **Reduced fatigue**
- ❹ Backplate with open design
→ **Ventilation through backplate**
- ❺ "Parachute-style" shoulder buckles
→ **Easily adjustable**
- ❻ Anatomically shaped backplate
→ **Comfortable to wear BA set**
- ❼ Carrying handle
→ **Easy to transport**



QS HARNESS

REFERS TO PRODUCT(-S) WITH PART NO.(-S)
95100-series

QS HARNESS is designed for ultimate comfort and to reduce fatigue. The harness is heavily padded with wide shoulder straps. Both the shoulder straps and the hip belt are equipped with pivot mechanisms in order to increase the freedom of movement and for an ergonomic weight distribution. The double pivot mechanism design reduces shoulder strain, even while performing heavy physical activities such as climbing ladders.

The harness can be used with a single cylinder, twin cylinders or a cylinder pack. Kevlar and Nylon versions are available.

Breathing apparatus from Interspiro is an investment with a long service life, when properly maintained. To simplify service and to obtain maximum product performance we recommend using our service kits, containing original spare parts necessary for preventive maintenance.

Interspiro offers training courses for users who perform day-to-day service work, as well as training for service personnel performing full maintenance programmes.

STANDARDS

- NFPA 1981:2002 Edition (Complete Apparatus)
- EN 137 (Complete Apparatus)

MATERIALS

- Backplate** Heat Resistant Polyamid
- Webbing** Kevlar 97% & Nomex 3% or Nylon

DIMENSIONS AND WEIGHT

Metal cylinder strap for single cylinder

Dimensions (h x w x d) 630 x 410 x 200 mm

Weight 2.05 kg

Cylinder pack version

Dimensions (h x w x d) 630 x 410 x 80 mm

Weight 2.08 kg

Textile cylinder strap version

Dimensions (h x w x d) 630 x 410 x 80 mm

Weight 2.11 kg

PERFORMANCE

Meets performance requirements of **EN 137 & NFPA 1981**

APPROVALS

Complete Interspiro Breathing Apparatus

- CE 89/686/EEC
- CFR 42 NIOSH
- NFPA 1981:2002 Edition
- US Coast Guard

CYLINDER PACK VERSION

Cylinder packs are easily mounted with a quick connect system.




METAL CYLINDER STRAP VERSION

The metal cylinder strap fits cylinders with diameters from 140 to 183 mm.



TEXTILE CYLINDER STRAP VERSION

Textile cylinder strap allow for flexibility in using single or twin cylinders.

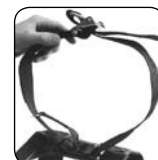

INTERSPIRO

www.interspiro.com | info@interspiro.com

NORTH & SOUTH AMERICA

INTERSPIRO Inc. www.interspiro-us.com
10225 82nd Avenue PLEASANT PRAIRIE WI 53158-5801 USA
TEL +1 262 947 9000 FAX +1 262 947 9020 E-MAIL info@interspiro-us.com

CENTRAL EUROPE

AUSTRIA
INTERSPIRO GesmbH www.interspiro.de
Sternweg 20 A-8401 ZETTLING AUSTRIA
TEL +43 (0)313 557 333 FAX +43 (0)313 557 333 22 E-MAIL info@interspiro.de

GERMANY
INTERSPIRO GmbH www.interspiro.de
Postfach 1220 D-76691 FORST/BADEN GERMANY
TEL +49 (0)7251 8030 FAX +49 (0)7251 2298 E-MAIL info@interspiro.de

SWITZERLAND
INTERSPIRO AG www.interspiro.de
Güterstraße 47 CH-4133 PRATTELN SWITZERLAND
TEL +41 61 827 99 77 FAX +41 61 827 99 70 E-MAIL info@interspiro.ch

THE NETHERLANDS & BELGIUM

INTERSPIRO BV www.interspiro.nl
Televisieweg 113 NL-1322 BD ALMERE NETHERLANDS
TEL +31 (0)36 5363103 FAX +31 (0)36 5384809 E-MAIL infobv@interspiro.com

UNITED KINGDOM & IRELAND

INTERSPIRO Ltd. www.interspiro.com
7 Hawksworth Road Central Park TELFORD Shropshire TF2 9TU UNITED KINGDOM
TEL +44 (0)1952 200 190 FAX +44 (0)1952 299 805 E-MAIL infouk@interspiro.com

SCANDINAVIA, ASIA/PACIFIC, MIDDLE EAST & EXPORT

SWEDEN
NORDIC & EXPORT SALES DIVISION www.interspiro.com
Box 10060 S-181 10 LIDINGÖ SWEDEN
TEL +46 8 636 51 00 FAX +46 8 765 48 53 E-MAIL info@interspiro.com

MALAYSIA
NORDIC & EXPORT SALES DIVISION www.interspiro.com
305 & 305A Lorong Perak Taman Melawati 53100 KUALA LUMPUR MALAYSIA
TEL +60 3 4105 8122 FAX +60 3 4105 3122 E-MAIL interspiro.asiapacific@interspiro.com