

SPIROSCAPE

EMERGENCY ESCAPE BREATHING DEVICE (EEBD)

- 1 Unique patented automatic ambient air valve
→ **Eliminates the risk of suffocation**
- 2 Unique patented air supply system in the hood
→ **Maximized duration, minimized dead space**
- 3 Two-layered hood, outer and inner
→ **Positions the inner mask correctly**
- 4 Very flexible neck seal
→ **Easy to don and comfortable to wear**
- 5 Quiet air delivery system
→ **Allows voice communication**
- 6 Fail safe quick start mechanism
→ **Guarantees automatic air activation**
- 7 Compressed breathing air technology
→ **Unit can be re-used**
- 8 Quick fill system
→ **Quick and easy recharging of cylinders**



SPIROSCAPE

EMERGENCY ESCAPE BREATHING DEVICE


There cannot be a simpler unit than the **SPIROSCAPE**. Once it is donned, the user is able to focus on escape. This is made possible with the unique ambient air valve which automatically opens when the cylinder is depleted. Thereby eliminating the risk of suffocation inside the hood and no air is wasted on a low air warning alarm.

The patented air distribution system expels CO₂ from the hood optimizing the use of air from the cylinder. The air flow is activated by pulling the quick start tab. This simultaneously opens the zipper on the carrying bag, giving the user access to the hood.

An anti-tamper tag verifies the integrity of the unit and the cylinder contents gauge can easily be read from the outside.

The **SPIROSCAPE** comprises of a cylinder with breathing air which can be easily recharged with the simple quick fill system, providing a unit that is easy to re-use and ideal for training.

The hood has a very flexible neck seal providing an effective seal and making the hood easy to don and comfortable to wear.

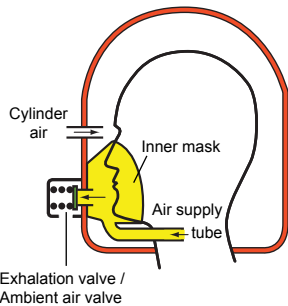

For more information about the Interspiro product range and our other breathing protection products please visit our website.

REFERS TO PRODUCT(-S) WITH PART NO. (-S)

95300-02	Filled cylinder	200 bar, 15 min
95300-02EMPTY	Unfilled cylinder	200 bar, 15 min
95300-11	Filled cylinder	3000 psi, 10 min
95300-12	Filled cylinder	3000 psi, 15 min

STANDARDS

- EN 1146
- 42 CFR Part 84

MATERIALS

Outer Hood	Coated PVC, fluorescent yellow
Inner Hood	Spandex
Inner mask	Natural rubber
Visor	Surface treated PVC
Neck seal	Silicone
Breathing hose	Wire reinforced PVC
Carrying bag	PVC coated polyamid

DIMENSIONS AND WEIGHT

As delivered, in cardboard box:

Dimensions	530 x 240 x 140 mm
Weight (3 lit., filled)	6.0 kg
Weight (3 lit., unfilled)	5.0 kg

CYLINDER

Volume	Pressure	Duration	Material
3 lit.	200 bar	15 min	Steel
134 cu.in.	3000 psi	10 min	Aluminum
210 cu.in.	3000 psi	15 min	Composite

QUICK FILL

The quick fill adapter provides easy and fast recharging of the cylinder.

Description	Order no
Quick fill, EN144, 200 bar	95360-02
Quick fill, CGA, 3000 psi	95360-04

APPROVALS

- 96/98 EC on Marine Equipment, M.E.D. ("Ships Wheel")
- CE 89/686/EEC
- 97/23/EG/PED
- NIOSH

INTERSPIRO

www.interspiro.com

CENTRAL EUROPE

AUSTRIA

INTERSPIRO GesmbH www.interspiro.de
Sternweg 20 A-8401 ZETTLING AUSTRIA
TEL +43 (0)313 557 333 FAX +43 (0)313 557 333 22 E-MAIL info@interspiro.de

GERMANY

INTERSPIRO GmbH www.interspiro.de
Postfach 1220 D-76691 FORST/BADEN GERMANY
TEL +49 (0)7251 8030 FAX +49 (0)7251 2298 E-MAIL info@interspiro.de

SWITZERLAND

INTERSPIRO AG www.interspiro.de
Güterstraße 47 CH-4133 PRATTELN SWITZERLAND
TEL +41 61 827 99 77 FAX +41 61 827 99 70 E-MAIL info@interspiro.ch

THE NETHERLANDS & BELGIUM

INTERSPIRO BV www.interspiro.nl
Televisieweg 113 NL-1322 BD ALMERE NETHERLANDS
TEL +31 (0)36 5363103 FAX +31 (0)36 5384809 E-MAIL infobv@interspiro.com

NORTH & SOUTH AMERICA

INTERSPIRO Inc. www.interspiro-us.com
10225 82nd Avenue PLEASANT PRAIRIE WI 53158-5801 USA
TEL +1 262 947 9901 FAX +1 262 947 9902 E-MAIL sales@interspiro-us.com

UNITED KINGDOM & IRELAND

INTERSPIRO Ltd. www.interspiro.com
7 Hawksworth Road Central Park TELFORD Shropshire TF2 9TU UNITED KINGDOM
TEL +44 (0)1952 200 190 FAX +44 (0)1952 299 805 E-MAIL infouk@interspiro.com

SCANDINAVIA, ASIA/PACIFIC & MIDDLE EAST

SWEDEN

NORDIC & EXPORT SALES DIVISION www.interspiro.com
Box 10060 S-181 10 LIDINGÖ SWEDEN
TEL +46 8 636 51 00 FAX +46 8 765 48 53 E-MAIL info@interspiro.com

MALAYSIA

NORDIC & EXPORT SALES DIVISION www.interspiro.com
305 & 305A Lorong Perak Taman Melawati 53100 KUALA LUMPUR MALAYSIA
TEL +60 3 4105 8122 FAX +60 3 4105 3122 E-MAIL asiapacific@interspiro.com